


MEASUREMENT ILLUSTRATIONS

- STATIONARY PANEL LENGTH -

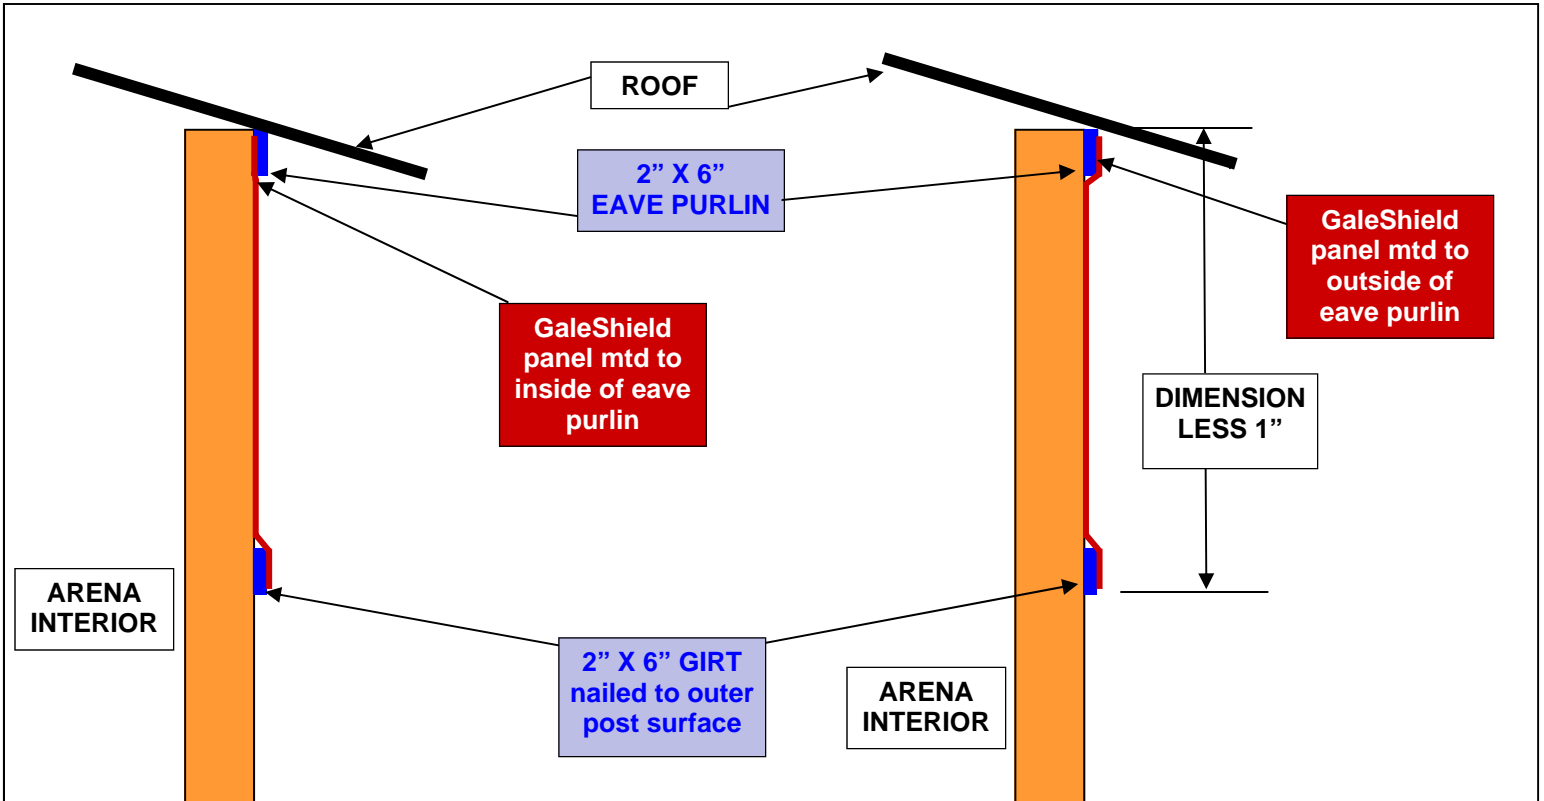

NOTE:

MEASURE FROM THE TOP OF THE 2" X 6" EAVE PURLIN DOWN TO THE BOTTOM OF WHATEVER HORIZONTAL SURFACE (FLAT GIRT, INSET GIRT OR TOP CAP) WHERE THE BOTTOM HEM WILL ATTACH. ALWAYS DEDUCT 1" FROM THE ACTUAL HEIGHT MEASUREMENT TO ENSURE THE SCREEN PANEL CAN BE ADJUSTED UP OR DOWN DURING THE INSTALLATION PROCESS FOR PROPER FIT

